



RUFFWEAR[®]

Boots Size Chart



Measure across widest part of front and back paws when bearing weight

1.5 in (38 mm)

1.75 in (44 mm)

2.0 in (51 mm)

2.25 in (57 mm)

2.5 in (64 mm)

2.75 in (70 mm)

3 in (76 mm)

3.25 in (83 mm)

In between sizes: Choose the smaller size